

SELECT  
DESTINATION  
STATION

AKABANE

IKEBUKURO

NAKANO

SHINJUKU

UENO

TOKYO

SHINAGAWA

①

FIG. 12B

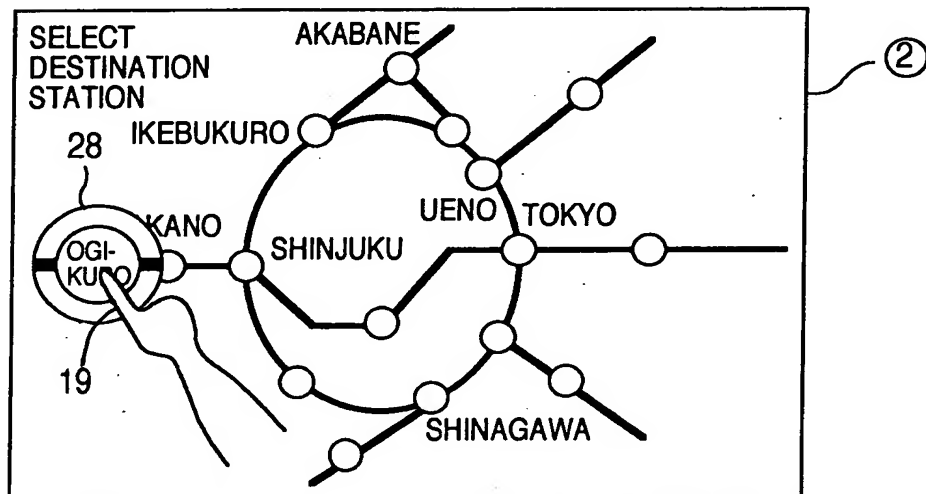


FIG. 12C

PUT YOUR CASH OR CARD INTO THE MACHINE	
TICKET	TO OGIKUBO
AMOUNT OF PURCHASE MONEY	¥160
AMOUNT OF MONEY PUT INTO THE MACHINE	¥0